


Strong on Energy Performance: Continuous Insulation

Wall assemblies with STYROFOAM SIS™ Structural Insulated Sheathing and OX ISO RED ci provide “ci”

A full wrap of significant R-values outboard of frame =
Reduced Heat Lost Through Thermal Bridging

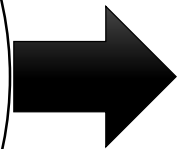

THERMAL ENERGY IS LOST THROUGH UNINSULATED FRAMING.

A house with OSB and R-13 batts – a good start, but look at all the thermal shorts.**



FULL COVERAGE WITH INSULATED SHEATHING INSULATES THE WHOLE WALL INCLUDING FRAMING.

A house with OSB and R-13 batts, covered with 1/2" rigid foam insulated sheathing. NOW, you can see the difference adding insulated sheathing makes.**



Take a look: In these thermal photographs, heat loss is indicated on a scale of red (the most heat loss) to purple/blue (no heat loss).